

To : S.Eng. (K) @ 01/10/26  
: MSupt (J) 01/10/26

Date: Thursday  
Wed 01 Oct 2026

**RE: Procedure to open DIVOS monitoring system – The Info-Center**

Sir,

As requested, please find attached, the requested documents.

- Please note that, watch technicians are fully aware and conversant with the Info-Center and with the Procedure (Annex 2)
- The checks are being done daily. Refer to my instructions to watch-technicians, in the log book, on the 20 Aug 2026 at 10:31 UTC.

Refer to the email from Mr. BESYARFARD Mohammadreza dated 12 Sep 2026 (Annex 1)

- Frequentis' Technical Service Line details to report urgent technical matters.

Email : TSL@frequentis.com  
Phone No. : +43 1 811 50 3020

Yours faithfully,



**Mofeejuddy N.**  
(Maintenance Supervisor)

@ 02/10/26  
MSupt | Please keep  
record  
@  
01/10

## Procedure to Check DIVOS recording System – Info-Center

- |         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Steps   | 1. On the DIVOS client PC, <ul style="list-style-type: none"><li>- Login as : Userdivos</li><li>- Password: xxxxxxxx</li></ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| And     | 2. Open <b>CHROME</b> browser, (see <i>Annex 2</i> ) <ul style="list-style-type: none"><li>- The browser will automatically open the INFO-CENTER (DIVOS monitoring system), a Graphical User Interface (GUI) of all the system.</li><li>- Tab 1: <b>SYSTEM</b>. (GUI of all the connected Hardware)</li><li>- Tab 2: <b>ALARMS</b>. (Log)</li></ul>                                                                                                                                                                                                                                                                                                            |
| Actions | 3. Click on any item of the GUI to open its detailed view. <ul style="list-style-type: none"><li>- Select the Item/s on Alarm (if any) to have detailed view.</li><li>- Select Tab 2 to view the Alarms log.<ul style="list-style-type: none"><li>- Alarms can be:<ul style="list-style-type: none"><li>a. “<b>ACTIVE</b>” – Red Icons</li><li>b. “<b>INACTIVE</b>” – Green Icons</li></ul></li></ul></li></ul>                                                                                                                                                                                                                                                |
|         | 4. If there is <b>ACTIVE</b> alarm: <ul style="list-style-type: none"><li>- During normal working days:<ul style="list-style-type: none"><li>- Inform the SMO concerned for necessary actions and follow normal fault reporting procedure.</li></ul></li><li>- During Odd hours:<ul style="list-style-type: none"><li>- Inform the On-call officers and follow instructions of the Engineer. (if the problem has to be reported to frequentis as per higher officer’s instructions, then<ul style="list-style-type: none"><li>- Helpdesk email : <b><u>TSL@frequentis.com</u></b></li><li>- Phone No. : <b>+43 1 811 50 3020</b></li></ul></li></ul></li></ul> |

### The following steps will guide you to provide Frequentis’ Engineer with the VPN connection for remote intervention if needed:

- Open the DIVOS cabinet at the back and locate the VPN box (black box labelled “Frequentis”) with 2 LEDs – One Blue (Power) and 2<sup>nd</sup> Flashing “Red”
- Connect the white LAN cable labelled “FRQ VPN” to the WAN port of the box and wait for a few seconds.
- When connection is established, the “Flashing Red” led will turn BLUE Solid.
- Inform Frequentis about VPN connection ready.
  - If Frequentis reported to be unable to connect, cold reboot the VPN box by power cycling.

Koodoruth

**From:** dca-tech@govmu.org  
**Sent:** Tuesday, 22 September 2026 10:07  
**To:** 'Osman Koodoruth'  
**Subject:** Sat 12 Sep 2026: Reply from FRQ Mr. Reza...incident reporting email

**From:** BESYARFARD Mohammadreza <Mohammadreza.BESYARFARD@frequentis.com>  
**Sent:** Saturday, September 12, 2026 4:36  
**To:** MOFEEJUDDY Nirshad (external) <dca-tech@govmu.org>  
**Subject:** Automatic reply: Faults with divos recorder

Dear sender,

Thanks for your email. I am currently out of office (on vacation) and have limited access to emails. I will be again available on 17.09.2026.

For urgent technical matters (Incidents, Problems) please contact Technical Service Line:  
email: [TSL@frequentis.com](mailto:TSL@frequentis.com)  
Phone: +43 1 811 50-3020

or call me on Mobile 0043 664 60850 3328

Your message has not been forwarded automatically.

Kind Regards,  
Reza Besyarfard  
Frequentis AG

Tab 1


Tab 2

System

Alarms

DIVOS Mauritius

Device: FIMP-VLDB-A

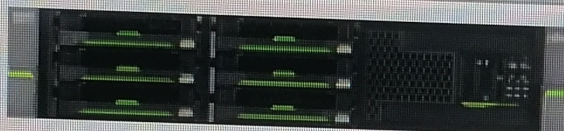

Description: FIMP-VLDB-A  
Model: PRIMERGY RX1330 M4

|                            |            |                                     |
|----------------------------|------------|-------------------------------------|
| Network Connection         | Status: OK | <input checked="" type="checkbox"/> |
| Monitored Partitions       | Status: OK | <input checked="" type="checkbox"/> |
| Monitored Services         | Status: OK | <input checked="" type="checkbox"/> |
| Monitored Web Applications | Status: OK | <input checked="" type="checkbox"/> |
| Authentication Service     | Status: OK | <input checked="" type="checkbox"/> |
| Authorization Service      | Status: OK | <input checked="" type="checkbox"/> |
| Cleanup Service            | Status: OK | <input checked="" type="checkbox"/> |
| DB Jobs                    | Status: OK | <input checked="" type="checkbox"/> |
| File Check Service         | Status: OK | <input checked="" type="checkbox"/> |
| File Deletion Service      | Status: OK | <input checked="" type="checkbox"/> |
| Fujitsu Server             | Status: OK | <input checked="" type="checkbox"/> |
| Metadata WebService API    | Status: OK | <input checked="" type="checkbox"/> |
| Playback Service           | Status: OK | <input checked="" type="checkbox"/> |
| Retention Service          | Status: OK | <input checked="" type="checkbox"/> |
| System Time                | Status: OK | <input checked="" type="checkbox"/> |
| Tasks                      | Status: OK | <input checked="" type="checkbox"/> |

#### Monitored Partitions:

| Reporting Machine:  | FIMP-VLDB-A | FIMP-VLDB-B                            |
|---------------------|-------------|----------------------------------------|
| C: Disk space used: | 81 GB       | 0 GB <input type="checkbox"/> 121.3 GB |
| D: Disk space used: | 17.2 GB     | 0 GB <input type="checkbox"/> 30 GB    |
| E: Disk space used: | 439.9 GB    | 0 GB <input type="checkbox"/> 1000 GB  |
| F: Disk space used: | 26.9 GB     | 0 GB <input type="checkbox"/> 100 GB   |
| G: Disk space used: | 19.3 GB     | 0 GB <input type="checkbox"/> 120 GB   |
| H: Disk space used: | 0.6 GB      | 0 GB <input type="checkbox"/> 87.3 GB  |
| I: Disk space used: | 1 GB        | 0 GB <input type="checkbox"/> 216 GB   |

OK FIMP-VLDB-A

- Network Connection ☒
- Monitored Partitions ☒
- Monitored Services ☒
- Authentication Service ☒
- Authorization Service ☒
- Cleanup Service ☒
- DB Jobs ☒
- File Check Service ☒
- File Deletion Service ☒
- Fujitsu Server ☒
- Metadata WebService API ☒
- Playback Service ☒
- Retention Service ☒
- System Time ☒
- Tasks ☒
- Monitored Web Applications ☒

Click picture for details ...